

Elitech[®]

Innovation Preceding All

Intelligent Vacuum Pump User Manual



SVP-7/SVP-9/SVP-12

Contents

Disclaimer1

Product Features2

Technical Parameters2

Service Parts3

Operation Guide4

Care and Maintenance9

App Operating Instructions11

Disclaimer

- The vacuum pump is heavy. Be careful while handling to prevent personal injury.
- Use only ISO 46 mechanical oil to avoid vacuum pump damage.
- Do not cover the exhaust port during vacuum pump operation.
- Do not expose the suction port continuously to atmosphere for more than 3 minutes.
- The air inlet pressure should not exceed 27.5 bar to avoid sensor damage.

Warning Signs

Sign	Name	Content
	Check the Oil Level	Add ISO 46 mechanical oil before the first use and keep the oil level between the maximum and minimum level
	Wear Goggles	Wear goggles when working with refrigerants . Direct contact with refrigerants may cause injury
	Beware of High Temperature Burns	The pump surface becomes hot during normal operation . Do not touch the pump body or motor during operation
	Avoid Electrical Shock Hazards	Improper use may cause electrical shock hazards Read and follow the instructions carefully and take precautions to avoid electrical shock hazards . Confirm that all associated devices are grounded correctly before power on
	Danger	Please remove the exhaust cap before starting up
		Check the oil level and prohibit running without oil



Product Features

- Intelligent Control of Motor and Solenoid Valve
- Leakage Level Judgment
- Vacuum Change in Graph
- 4" Touch Screen Display
- Estimated Job Completion Time
- Data Logging and Storage via App

Technical Parameters

Models	SVP-7	SVP-9	SVP-12
Stage	2 stages		
Power Supply	110V / 60HZ; 220V/50HZ		
Motor	AC induction motor		
Speed Regulation	Fixed speed		
Vacuum Accuracy	1-10000microns ±10% of Reading / ±10microns 10000-19000 microns ±20% of Reading		
Operating Temperature	5°C~40°C(41°F~104°F)		
Transmission Distance	30ft / 10m		
Limit Vacuum	15 microns		
Pumping Rate	7 CFM (3L/S)	9 CFM (4L/S)	12 CFM (5L/S)
Motor Power	3/4 HP (550 W)	1 HP (750 W)	1 HP (750 W)
Fuel Volume	22oz /(650ml)	22 oz /(650ml)	25.3 oz(750ml)
Overall Dimension	18.5in×10.5in×14.8in / (470mm*267mm*380mm)		
Weight	34.2lbs / 14.8kg	35.3lbs / 15.3kg	36.8lbs / 16kg
Air Inlet	1/4 SAE ;3/8 SAE		

Service Parts

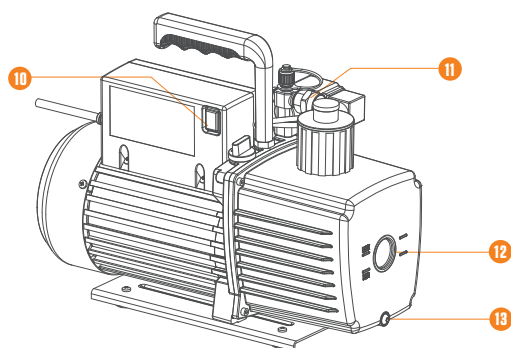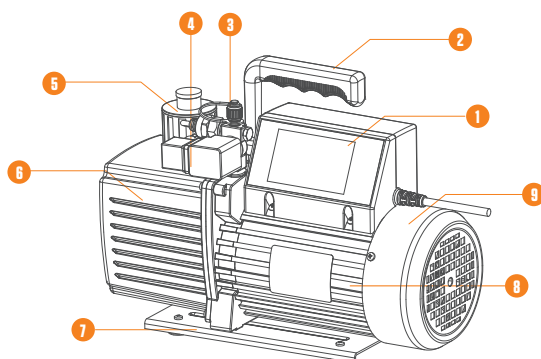

① Display screen	⑧ Motor
② Handle	⑨ Motor housing
③ Air inlet	⑩ Power button
④ Solenoid valve	⑪ Vacuum sensor
⑤ Catcher	⑫ Oil window
⑥ Oil tank	⑬ Oil drain plug
⑦ Base	

Operation Guide


Conditions that must be met

1. Place on a flat surface.
2. Confirm the voltage and frequency at the outlet match with the vacuum pump specifications.
3. Confirm the oil level is within the Min and Max level.
4. Remove the air inlet cap (1/4 SAE fitting as shown in the right image), connect the pumped system (make sure the pipe fitting is fit with the air inlet fitting). Tighten the air inlet and make sure the system and hoses are sealed with no leakage.
5. Plug in the power cord and open the exhaust port.



Interface Introduction

Main interface

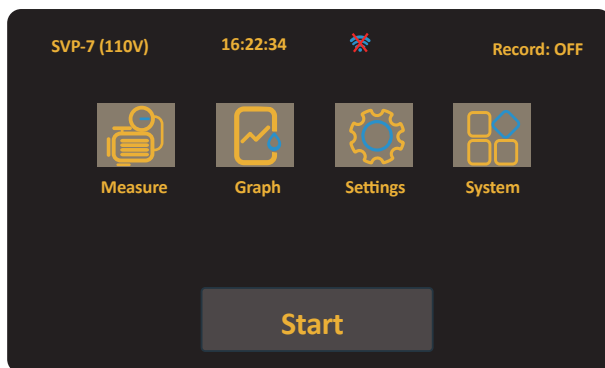


- (1) The status bar on top of the page shows the product model, time, Bluetooth status and record status.
 - ① Model number varies depending on the product models.
 - ②  Bluetooth not connect;  Bluetooth connected.
 - ③ During operation,  appear when temperature exceeds the upper alarm limit, and  appear when temperature below the lower alarm limit.
 - ④ Record: close means no data is recorded. Record: Open means that data is being recorded.
- (2) The middle part of the page is the sub-interface button.
 - ①  : Real-time measurement interface
 - ②  : Graph
 - ③  : Vacuum parameter setting
 - ④  : System parameter display and setting
- (3) The bottom part is the “Start” and “Stop” button. The motor is off by default after power-on. Click “Start” to start the motor. Button will be locked (within 3 sec); Click “Stop” to stop the motor. Button will be locked (within 10 sec).
After the motor stops, in order to prevent frequent start and stop, the button is invalid within 10 seconds.

When the motor starts, the solenoid valve automatically opens instantly. The solenoid valve closes automatically after the motor stops to avoid the oil be suck to vacuum sensor.

1. Real time measurement interface

Click the “Measure” button on the main interface to enter the real-time measurement interface.

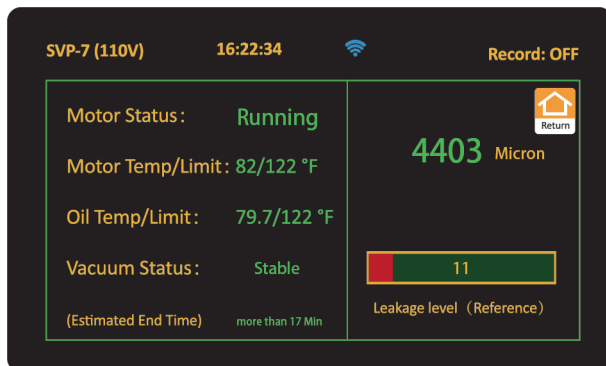


- (1) Motor Status: show the current status of the motor.
- (2) Motor Temp/Limit: show the surface temperature of the pump chassis and set the alarm temperature.
- (3) Oil Temp/Limit: show vacuum pump oil temperature and set the alarm temperature.
- (4) Vacuum Status: display the current vacuum value status, "Decrease", "Stable", "Rise", "--".
- (5) Estimated End Time: when the vacuum is stable, it shows the estimated job completion time including holding time.
- (6) Vacuum Reading Display: Vacuum readings shows when the vacuum of the system in real-time is below 60000microns. The waiting time for the vacuum reading is longer for a larger system.

Note: The vacuum reading varies due to the sensor placement different. The reading variances is caused by the uneven air flow during the vacuuming process. The farther the air from the pump, the higher the air density is thus the vacuum reading is higher.

- (7) Leakage level: when the vacuum is stable, check the leakage possibility from 0 to 100 levels. 0 represent uncertain leakage. The larger the number, the greater the possibility of the leakage.
- (8)  Key: return to the main interface.

2. Graph

Click the "Graph" button on the main interface to view the vacuum change in real time.

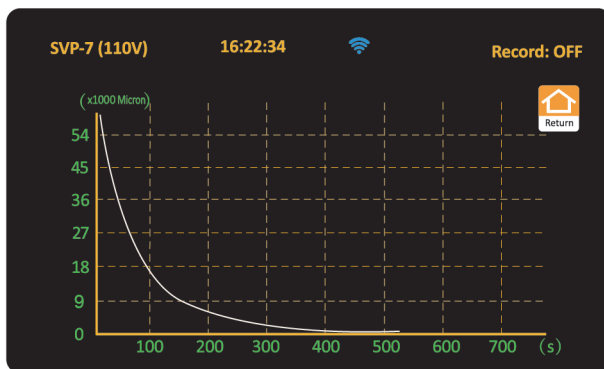


- (1) When the vacuum value drops below 60000microns, the vacuum change graph is displayed.
- (2) The X axis represent time. Y axis represent vacuum. The vacuum value is from 0-60000microns .
- (3)  Key: return to the main interface.

3. Settings

Click the “Settings” button on the main menu to enter the setting interface.


Unit (P/T)

Select Unit to set the unit for vacuum and temperature. The selected units are in green.

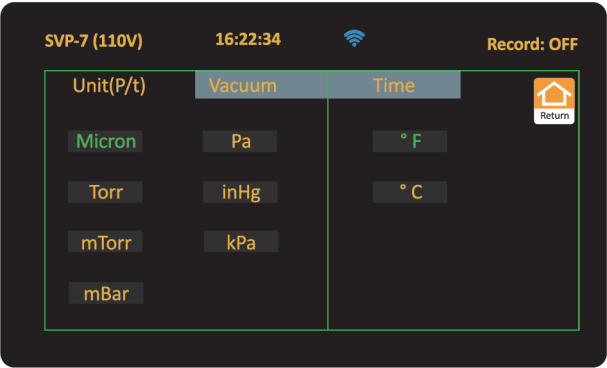


Vacuum

Set the minimum vacuum value, logging interval, and recording status.

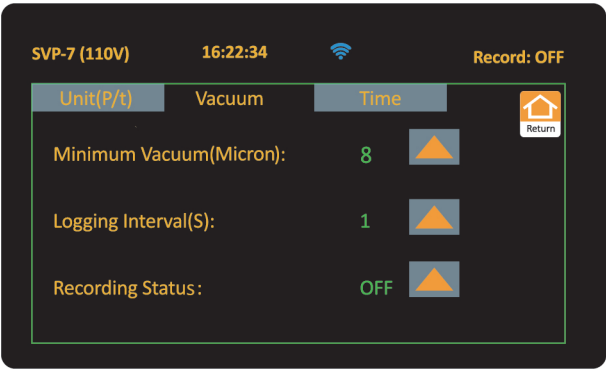

- (1) Minimum Vacuum: set the target vacuum value. The range of the minimum vacuum value is 8-750 microns. Click the change button to switch the minimum vacuum value; the display unit changes according to the selected unit.
- (2) Logging Interval (S): 1, 5, 10, 30, 60, 120, 300.
- (3) Recording Status: The logging can be turned on and off. The upper right corner shows the logging/recording status.

Time

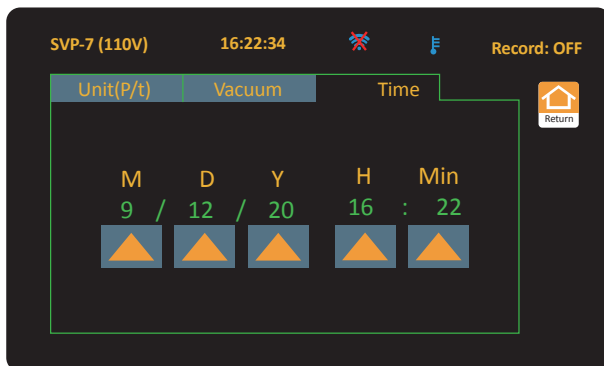

(1) Set and save the time then it shows at the top of the screen.

(2)  : Change key.

(3)  : return to the main interface.

4. System

In the main menu, click the “System” button to enter the system interface.



(1) Running Time: refer to the accumulated running time of the motor.

(2) Holding Time: refer to the time for the vacuum pump to continue vacuuming after the target vacuum value is stable.

(3) Flow Rate: refer to the pumping speed of the vacuum pump.

(4)  : Change key.

(5)  : return to the main interface.

Other functions

1. Temperature alarm: When the oil temperature or motor chassis temperature exceeds the upper limit alarm temperature set by the APP, the motor and solenoid valve are closed, the temperature alarm icon "  " is displayed at the top of the screen; When the temperature decrease within the alarm temperature, the alarm will be cleared, and the vacuum work continues . If temperature exceeds the offline alarm temperature, the temperature alarm icon "  " will be displayed on the top of the vacuum pump screen, the motor operation will not be affected.

5. After using the vacuum pump

1. Close the valve between the pump and the pumped container.
2. Turn off the power switch on the pump, unplug the power plug, and remove the connecting pipe.
3. Finally, close the air inlet cap to prevent dirt or floating particles from entering the pump cavity.

Care And Maintenance

Precautions

1. When the vacuum is started, the air pressure is relatively high and the pump exhaust volume is large, thus oil mist will be overflowing with a large amount of gas. This is a common phenomenon for a rotary vane vacuum pump.
When the vacuum drops to a very low level, the pump exhaust volume is small, and there will be no oil mist. Therefore, user should regularly monitor the oil level via the oil window to avoid running out of oil.
2. During operation, storage and transportation, keep the vacuum pump clean to prevent pollutants such as water, mechanical impurities, etc. from entering the pump so as not to affect the service life of the vacuum pump and the normal operation of the system.
3. The oil in the pump should be drained if it is not used for a long time. Store the pump in a dry and clean environment.
4. The diameter of the pipe is larger than the inner diameter of the air inlet to avoid affecting the pumping speed.
5. Check the tightness of the pipe connection to prevent leakage. Recommend using the vacuum grease on the connection and clamp it with a clamp to ensure the seal.
6. Do not use the pump to pump out gases which contain high level of oxygen, metal corrosive and explosive gases. In addition, do not pump in any gases that react with pump oil and containing large amount of water vapor.
7. It is recommended to clean the catcher once every half year.

How to replace the vacuum pump oil

1. Run the pump for about 3-5minutes until it is warmed up to runs out the pump oil.
2. When the pump is running, open the air inlet port at the same time to let the oil flow back to the oil tank. The pump must stop when replacing the oil.
Stop the pump and open the oil drain plug. Then open the catcher to speed up the process of oil exhausting.
3. Tilt the pump body to completely drain the residual oil, and tighten the drain plug.
4. Open the catch device and add the new pump oil.
5. Cover the air inlet cap and start the pump to run-check the oil level after one minute.If the oil level is below the lower limit, slowly add the oil until it reaches the normal oil level. Finally, screw on the catcher.


Troubleshooting Guide

Failure Phenomenon	Cause of Issue	Troubleshooting Method
Low Vacuum	1. Insufficient Oil	Add oil between the maximum and minimum level
	2. Pump oil Emulsified, Polluted	Replace with new oil
	3. The Oil Inlet Is Blocked or the Oil Supply is Insufficient	Clean the oil inlet and filter
	4. Leakage of the Pump System and Connection	Check the system and the connection to prevent the leakage
	5. Improper Selection of Pump	Check the size of the pumped container, recalculate and select the appropriate type of pump
	6. Parts Wear and Tear due to Long Time Used.	Repair or replace with a new pump
Oil Leakage	1. The Oil Seal Is Damaged	Replace oil seal
	2. Loose or Damaged Tank Connections	Tighten the screws and replace the O -ring

Fuel Injection	1. Too Much of Oil	Drain the oil to the oil level line
	2. The Air Inlet Is Over Pressured for a Long Time	Choose a pump with larger pumping speed
Difficulty Starting	1. Oil Temperature is Too Low	Open the air inlet, start the motor repeatedly or heat up the pump oil
	2. Motor Failure	Check and repair
	3. Foreign Objects Fallen into the Pump	Check and clean
	4. Power Failure	Check and repair
	5. The Power Supply Voltage Is Too Low	Check the power supply voltage


APP Operating Instructions

1. Power on the vacuum pump.
2. Turn on the Bluetooth function on the mobile phone.
3. Open the “Elitech Tools” APP.

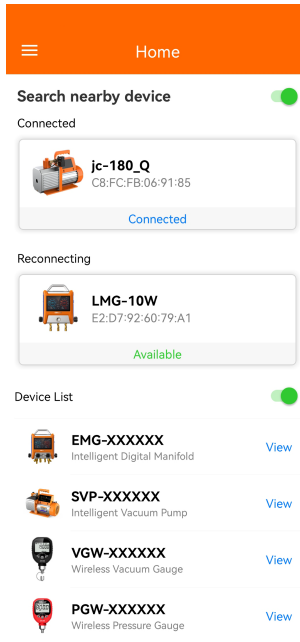


4. Enter the home page, enable “search nearby device” to find the vacuum pump. Tap on the device found to connect to it. When connected, tap to enter the device details interface. Enable “device list” to view models supported on this app. Tap “View” to view the functions of the device.

5. Tap “☰” on the top left corner to enter the menu. (Menu instructions below are of vacuum pump only, not including other Elitech devices)

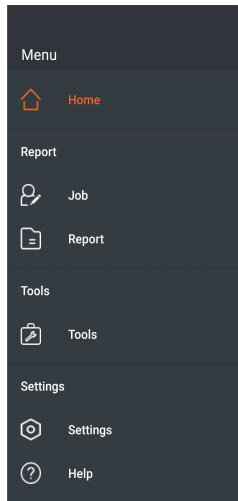


(1) Report

 - ① Job: Tap the “Job” to enter the job list. Tap “+” to add a new job. Fill in work information and tap “SAVE” to save the job.




- ② **Report:** Tap “Report” to enter the report interface.
 Select a report by job or by date, tap to view data and graph. Tap "EXPORT" at the bottom to export it in Excel or PDF.
 At the saved report, swipe left to delete the report.

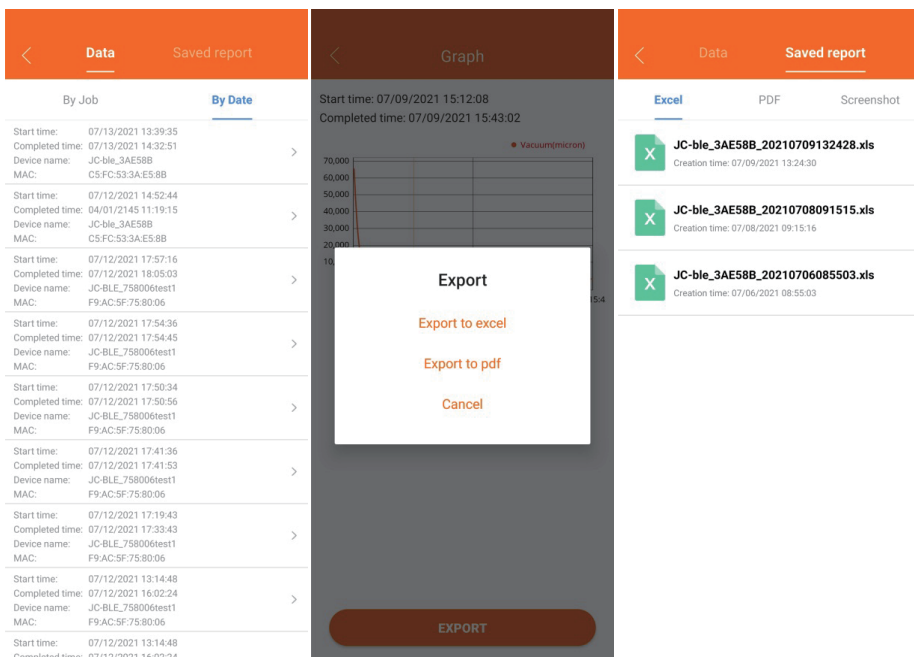

(2) Settings

- ① Setting: Tap the “Settings” to enter the system settings interface. .

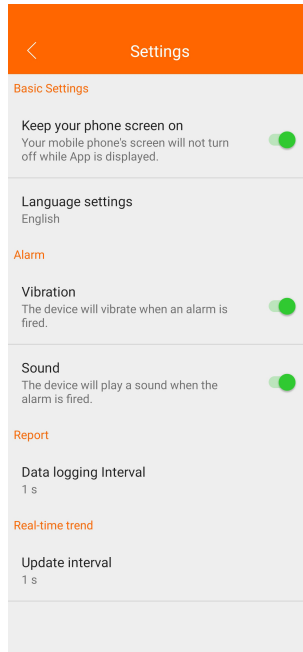

Keep your phone screen on: the screen won't turn off while the app is in use.

Language setting: select language as English or Chinese.


Alarm : single sound, single vibration or sound and vibration alarm at the same time.

Real-time trend: the data refreshing interval on the graph, 1s, 10s, 30s, 1s by default.

- ② Help: Tap the "Help" to enter the help interface. Tap the "About " to check the app version.

8. Device Detail

Tap the connected device icon to enter the detailed interface of the device, display the vacuum pump status, and control the vacuum pump.

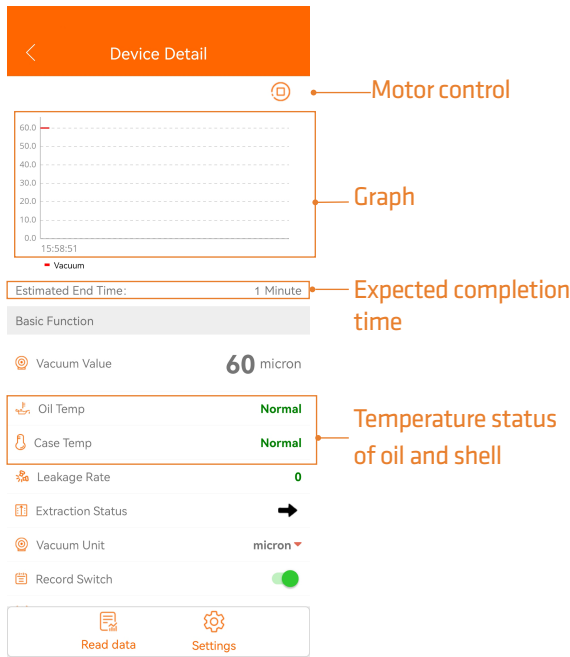


- (1) :Motor stop status, tap to start running.
- (2) :Motor running status, tap to stop the motor.
- (3) Graph: The real-time vacuum graph will be displayed after the vacuum value drops below 60000 microns.
- (4) Finish Time: When the vacuum comes to stability, the remaining vacuuming time will be estimated, which includes the holding time set.
- (5) Basic Function
 - ① Vacuum Value: the real-time vacuum value.

- ② Temperature status of oil and shell: Temperature status "High", "Normal", and "Low" displayed according to the set alarm temperature.
- ③ Leakage Rate: A leakage level will be displayed (for reference only) when the vacuum value is stable. The larger the number is, the greater the possibility of leakage is. "---" will be displayed before the vacuum value is stable.
- ④ Extraction status: vacuum status display, ⬆ (rise), ⬇ (decrease), ➡ (stable), --(exceed the range of vacuum sensor).
- ⑤ Vacuum Unit: select vacuum unit, inHg , Torr, mbar, mTorr, Pa, micron, kPa.
- ⑥ Record Switch: record the vacuum data, off by default.
- ⑦ Interval Time: select vacuum logging interval, 1S, 5S, 10S, 30S, 1Min, 2 Min, 5 Min.
- ⑧ Read data: read the data recorded while pumping. Before reading the data, it will ask whether to delete the data after reading.

7.Settings

Tap "Settings" to enter the basic, alarm and recording settings interface.

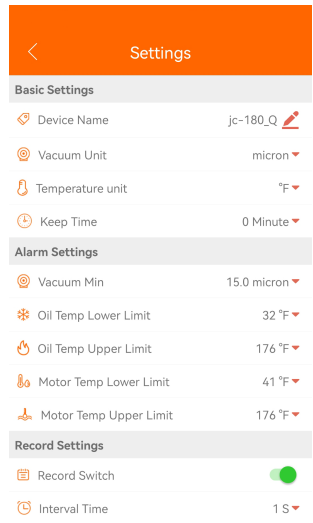

(1) Basic Settings

- ① Device Name: modify the device name, support up to 10 characters and numbers, Tap "OK" to save the device name.
- ② Vacuum Unit: select vacuum unit, inHg, Torr, mbar, mTorr, Pa, micron, kPa.
- ③ Temperature Unit: select the temperature unit, °C, °F.
- ④ Holding Time: the continuous working time after reaching the target vacuum, the setting range is 0 to 200 minutes.

(2) Alarm Settings

- ① Vacuum Min: A sound or vibration alarm will be triggered on your phone when the vacuum reaches the target value.
- ② Temperature alarm setting: A sound or vibration alarm will be triggered on your phone when the max and min oil temperature and shell temperature reach the target value. The temperature setting range is -58°F to 185°F.

(3) Record Settings

- ① Record Switch: record the vacuum data, off by default.
- ② Interval Time: set vacuum logging interval , 1S, 5S, 10S, 30S, 1Min, 2 Min, 5 Min.

Enter the APP Store and search for "Elitech Tools" to download or scan the QR code below to download.





Made in China